

Residential VoIP Feature Guide



Call Forwarding

* 7 2	Forward All Calls
* 7 3	Cancel Forward All calls
* 9 0	Forward On Busy
* 9 1	Cancel Forward On Busy
* 9 2	Forward On No Answer
* 9 3	Cancel Forward On No Answer
* 6 3	Forward Last Caller
* 8 3	Cancel Forward Last Caller

Call Blocking

* 6 0	Enable incoming Caller ID
* 8 0	Disable incoming Caller ID
* 7 8	Enable incoming Caller ID waiting
* 7 9	Disable incoming Caller ID waiting
* 7 7	Deactivate outgoing Caller ID
* 8 7	Allow outgoing Caller ID

Caller ID

* 6 5	Enable incoming Caller ID
* 8 5	Disable incoming Caller ID
* 2 5	Enable incoming Caller ID waiting
* 4 5	Disable incoming Caller ID waiting
* 6 7	Deactivate outgoing Caller ID
* 8 2	Allow outgoing Caller ID

Call Waiting

* 5 6	Enable call waiting on all calls
* 5 7	Disable call waiting on all calls
* 7 1	Enable call waiting for the next call
* 7 0	Disable call waiting for the next call

Call Return

* 6 9	Dial the last person who called you
* 8 9	Cancel an in progress call return

Voicemail

* 9 8	Dial the last person who called you
-------	-------------------------------------

Platinum Communication

Unit 15 - 6320 - 11 St. S.E.
Calgary, Alberta T2H 2L7

Technical Support

Phone: (403)301-4590 ext#1
Email: support@platinum.ca